


# CAUTION:

Do not connect an **"angled"** (green boot) APC connector to a **"flat"** (blue boot) UPC or PC connector.

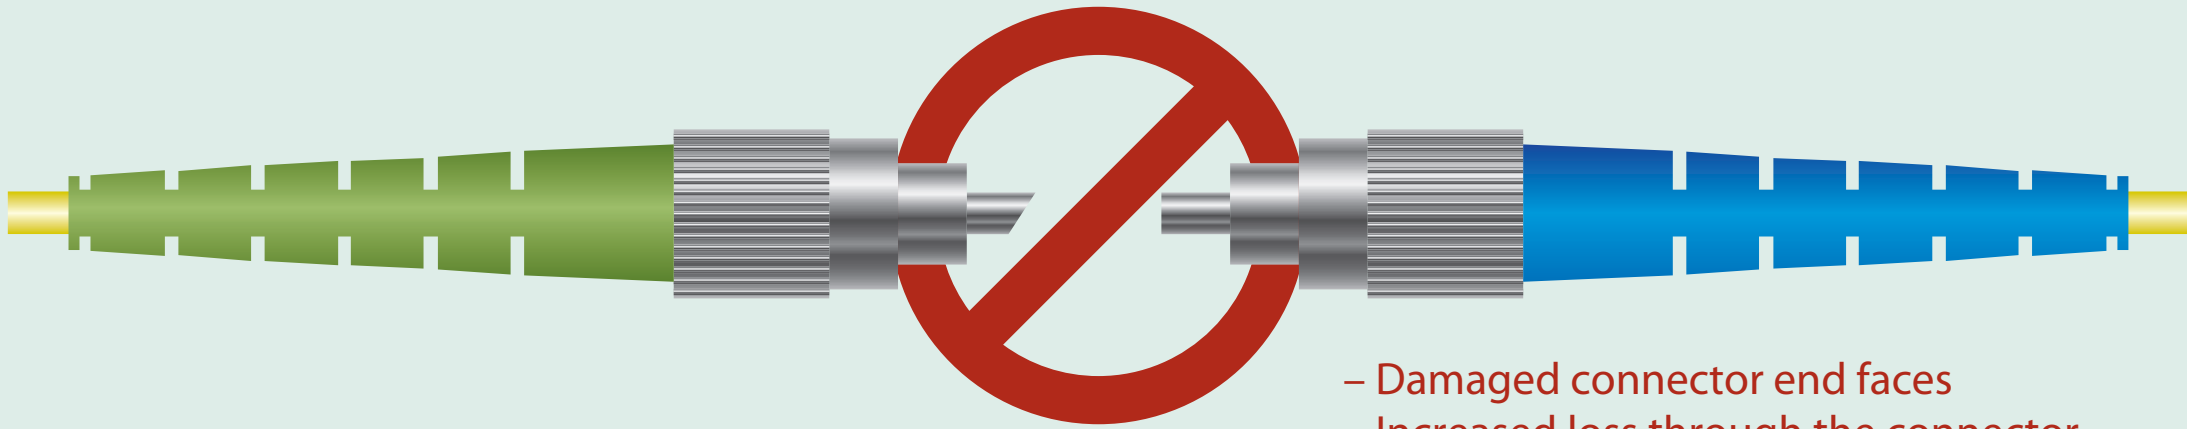

**This may result in any or all of the following:**


- Damaged connector end faces
- Increased loss through the connector
- Increased loss through the network
- Excessive return loss/reflectance
- Incorrect test results

## "Always Remember.. Inspect Before You Connect"

### Connector care

1. Always clean and inspect connector before inserting into equipment
2. Only connect compatible end face connectors together
3. Use a hybrid patch cord and interface barrel to transition from angled to non-angled interfaces
4. Always keep a clean dust cap on unused connectors

### Fiber connectors

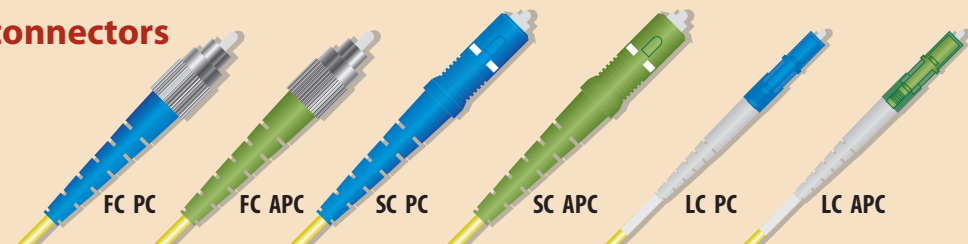

To learn more, visit [jdsu.com/fibertest](https://jdsu.com/fibertest)

### Technical Assistance:

Toll-Free (866)-228-3762  
Direct Dial (301)-353-1550  
Email [tac@jdsu.com](mailto:tac@jdsu.com)

